

Before using this unit, carefully read "USING THE UNIT SAFELY" and "IMPORTANT NOTES" (the leaflet "Read Me First"). After reading, keep the document(s) where it will be available for immediate reference.

How to Use

1. Turn the unit's power switch ON.

The power/battery indicator is lit.

2. Connect the transmitter (WL-T) to your electric bass.


The transmitter's power turns on, and the WL-T battery indicator is lit.

3. Verify that the electric bass wireless indicator is lit, and play your electric bass.

Your performance is heard from this unit.

- * If the wireless indicator is not lit, perform the steps in "Wirelessly Connecting This Unit with Your Electric Bass (Auto Wireless Connection)."
- * The ear pads are consumable items and can be removed (replaced).

About This Unit (WAZA-AIR BASS)

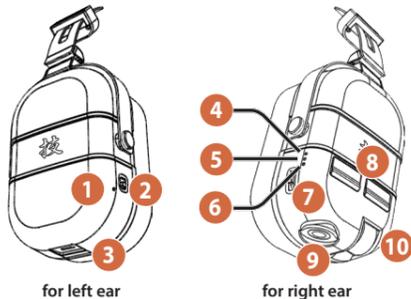

1 Charge indicator

Lit orange	Charging.
Unlit	Charging is completed. Or, power not supplied.
Blinking orange	A charging error occurred. Contact your dealer or a Roland customer service center.

2 Power switch (On/Charge)

3 CHARGE port (DC IN 5 V)

Connect a commercially available USB AC adaptor and charge this unit.

- * Charge the device using the included USB cable. Do not use the included USB cable with any other device.

4 Electric bass wireless indicator

Lit white	Connected with the transmitter
Unlit	Not connected with the transmitter

5 Bluetooth indicator

Lit blue	Connected
Blinking blue	Reconnecting
Rapid blinking blue	Pairing
Unlit	Not connected

6 Power/battery indicator

Lit green		Sufficient capacity remains.
Lit red	Power On	Battery will be exhausted in less than 30 minutes. Please recharge.
Blinking green		Standby mode.
Unlit	Power off	

7 Multi function button

Use this button to operate a Bluetooth device or rhythm guide mode.

	When using Bluetooth Audio	When using rhythm guide mode
Press once	Play/Stop	
Long-press	Pair with a Bluetooth device	Switch modes - mode1: Adjust tempo - mode2: Adjust volume
Tilt toward "+"	The Bluetooth Audio volume increases.	- mode1: Tempo up - mode2: Volume up
Tilt toward "-"	The Bluetooth Audio volume decreases.	- mode1: Tempo down - mode2: Volume down
Tilt toward "+" two seconds or longer	Fast-forward	
Tilt toward "-" two seconds or longer	Rewind	Switch the rhythm pattern

8 Up/Down buttons

Use these buttons to switch effect patches or to exit rhythm guide mode.

9 Transmitter in jack

When you connect the transmitter (WL-T), the "Auto Wireless Connection function" operates.

10 Volume knob (Electric Bass)

Adjusts the volume of the electric bass (instrument) to which the transmitter is connected.

About the Transmitter (WL-T)



11 CHARGE port (DC IN 5 V)

Connect a commercially available USB AC adaptor and charge this unit.

12 WL-T battery indicator

When inserted in the electric bass (indicates the remaining battery capacity of the WL-T)	
Lit green	Sufficient capacity remains.
Lit orange	Battery will be exhausted in less than two hours.
Lit red	Battery will be exhausted in less than 30 minutes. Please recharge.
Unlit	There is no remaining battery capacity.
When inserted in the WAZA-AIR BASS's transmitter in jack (indicates the status of the transmitter)	
Blinking orange	Auto Wireless Connection is operating.
When a commercially available USB AC adaptor is connected (indicates the charging status)	
Lit orange	Charging. * The charging time differs depending on the remaining battery charge and on the charging environment.
Unlit (lit green at 8-second intervals)	Charging is completed. * If you have not used the transmitter for a long time, one charge might not be sufficient. In this case, charge again.
Lit green	Charging was halted. * When five hours have passed since charging started, charging automatically stops in order to protect the rechargeable lithium-ion battery, even if charging was not completed. To complete charging, charge again.
Blinking red	A charging error occurred.

Charging

Charging This Unit (WAZA-AIR BASS)

1. Set this unit's power switch to CHARGE.

- * This unit is not charged while the unit's power is on.

2. Use the included USB cable to connect a commercially available USB AC adaptor (5 V / 0.5 A or more) to this unit's CHARGE port.

Charging the Transmitter (WL-T)

1. Use the included USB cable to connect a commercially available USB AC adaptor (5 V / 0.5 A or more) to the transmitter's CHARGE port.

At this time, the WL-T battery indicator is lit orange. When the indicator goes dark, charging is complete.

- * When charging from the CHARGE port, the wireless connection does not operate.

About standby mode

- If this unit or the transmitter are left powered-on in a silent state or without being operated, they enter "standby mode" to prevent the battery from running down.
- When you resume playing, or if physical vibration is applied to this unit or the transmitter, they return from standby mode after approximately two seconds.

When not using the system for an extended time

Unplug the transmitter and receiver. Standby mode does consume battery power, although only very slightly. Even if you do not use this product for an extended period of time, you should charge it once every three months to prevent the internal lithiumion battery from degrading.

Wirelessly Connecting This Unit with Your Electric Bass (Auto Wireless Connection)

Here's how to make initial settings for wirelessly connecting this unit with your electric bass (transmitter).

1. Turn the unit's power switch ON.

2. Insert the transmitter into the transmitter in jack.



This blinks orange while Auto Wireless Connection settings are being made. The process completes in approximately 10 seconds. When the orange blinking stops, remove the transmitter.

NOTE

Insert only the BOSS WL-T transmitter into the transmitter in jack. If you insert any other device, loud sound might be output, or this unit or the connected device might malfunction.

Advanced Operation

Switching Patches (CH)

You can switch between different effect patches (six types). The effect is applied to the sound of the electric bass.

1. Press the Up/Down buttons.

The effect is switched.

MEMO

- The position setting of the electric bass sound is remembered for each patch.
- You can use the "BOSS TONE STUDIO" app to modify the sound or edit the sound library. For details about BOSS TONE STUDIO, refer to the BOSS website. <http://boss.info/manuals/>

Using Rhythm Guide Mode

You can play back and switch between six different rhythm patterns.

1. With the multi function button held in the "+" direction, turn the power switch on.

The unit is in rhythm guide mode.

2. Press the multi function button once.

The rhythm pattern plays. Operate the multi function button to adjust the tempo and volume as desired.

3. Hold the multi function button in the "+" or "-" position for two seconds or longer.

The rhythm pattern switches.

- * For a list of the rhythm patterns, refer to "Using BOSS TONE STUDIO for WAZA-AIR BASS" (PDF).

4. To exit rhythm guide mode, long-press the up/down buttons.

MEMO

- The Bluetooth Audio function is off when you're using rhythm guide mode.
- If you connect with the "BOSS TONE STUDIO" app via Bluetooth, you can use the app to switch rhythm patterns, adjust the tempo, and control play/stop.

Pairing with a Mobile Device (Bluetooth® Audio)

Here's how you can use this unit to hear audio that's played back from your mobile device.

1. Long-press the Multi-function button (for three seconds or longer).

The Bluetooth indicator blinks rapidly.

2. Turn on the Bluetooth switch of your mobile device (e.g., smartphone).

3. In the Bluetooth screen of your mobile device, tap "WAZA-AIR BASS Audio."

Your mobile device is paired with this unit.

MEMO

- The sound image positioning function of this unit might position the sound of the Bluetooth audio toward the rear. The position can be memorized for each patch.
- For details on how to use the Bluetooth audio function, download and refer to the "Connecting the BOSS TONE STUDIO iOS App to the WAZA-AIR Unit" or "Connecting the BOSS TONE STUDIO Android App to the WAZA-AIR Unit" (PDF).

Reading a Detailed Explanation of This Unit

A more detailed explanation of this unit's functionality is provided in the "Using BOSS TONE STUDIO for WAZA-AIR BASS" PDF. Here's how to download the PDF.

1. From your smartphone or computer, access the following URL.

2. Download the "Using BOSS TONE STUDIO for WAZA-AIR BASS" (PDF).

http://roland.com/waza-air-b_om



Main Specifications

BOSS Wireless System: WAZA-AIR BASS

Type	Digital wireless (2.4 GHz) using a proprietary BOSS digital system One-piece Bluetooth headphones	
Driver	50 mm in diameter	
	WAZA-AIR BASS	Transmitter (WL-T)
Battery charging time	Approximately 3 hours	Approximately 3 hours
Expected battery life under continuous use	Approximately 5 hours	Approximately 12 hours
Power Supply	Supplied from lithium-ion battery or CHARGE port	
Current Draw	When charging: 470 mA	When charging: 350 mA
Weight	320 g, 12 oz	43 g, 2 oz
Accessories	Owner's Manual, Leaflet "USING THE UNIT SAFELY," Transmitter (WL-T), Micro USB cable for charging (*1) *1: Use a standard USB AC adaptor (5 V, over 0.5 A) for charging.	

- * This document explains the specifications of the product at the time that the document was issued. For the latest information, refer to the Roland website.