

[www.fishman.com](http://www.fishman.com)


**FISHMAN<sup>®</sup>**

**USER GUIDE  
KULA ONBOARD PREAMP**

# Kula Quick Start

---

- 1. Set the controls** • Set **volume** off and **bass**, **middle** and **treble** to center.
- 2. Plug in** • Connect to an amplifier or PA with a ¼-inch instrument cable. The **batt** light will flash once quickly to indicate it has switched on.
- 3. Tune up** • Press the **tuner** button. When it's on, the tuner mutes the output signal. Press again to exit.
- 4. Turn up** • Raise the **volume** and adjust the **bass**, **middle** and **treble** controls to your liking.

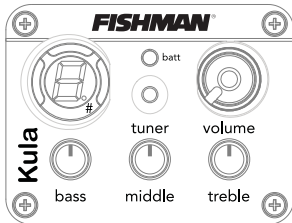

# Kula Controls

---

**Volume** • For the cleanest signal, set the **volume** knob as high as possible, without causing distortion or feedback.

**Bass** • Boost here to add depth and weight to the sound of the instrument.

**Middle** • Turn the **middle** knob all the way left for a smooth “scooped out” tone at high volume levels. Raise the **middle** knob to the right of center to add midrange “bite” to the sound.

**Treble** • Boost to cut through the mix. Cut to mellow and subdue the sound.

**Tune** • Use the tuner lights as shown below to tune your instrument.



"A" note  
below pitch



"A" note  
in tune



"A" note  
above pitch



"A#" note  
in tune

When the **batt** lamp lights steadily it is time to change the battery. To conserve the battery, unplug the instrument and turn off the tuner when not in use.

***FISHMAN***

[www.fishman.com](http://www.fishman.com)