

# Notice of Added Functions

This leaflet explains the functions that have been added on this instrument. Read it in conjunction with the Owner's Manual.

## Bluetooth Functionality (Owner's Manual: p.8)

### Using the Page Turning Function and MIDI Transmit/Receive Function Simultaneously

For example, this lets you use the pedal to turn pages while receiving MIDI and playing sounds on this unit.

1. Place the mobile device that you want to connect nearby this unit.

#### MEMO

If you have more than one unit of this model of unit, power-on only the unit that you want to pair (power-off the other units).

2. Hold down the [FUNCTION] button and press A0 on the keyboard.

This unit's Bluetooth function turns on.

3. Hold down the [FUNCTION] button and press E1 on the keyboard.

 
How the page turning function and the MIDI function can be used simultaneously.

#### MEMO

In some cases when you switch the function, the connection with the mobile device might become unavailable. In this case, take the following steps.

- In the Bluetooth screen of your mobile device, cancel the registration of this unit.
- Turn off the Bluetooth function of your mobile device, and then turn it on again.

4. Turn on the Bluetooth function of the mobile device.

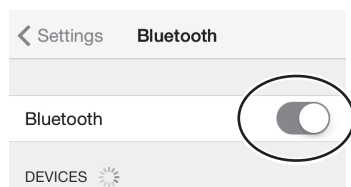

#### MEMO

The example shown here uses the iPhone. For details, refer to the owner's manual of your mobile device.

5. On your mobile device, tap "FP-30."

This unit will be paired with the mobile device. When pairing succeeds, the model name of this unit ("FP-30") is added to the "Paired Devices" list of the mobile device.

When the connection is established, this unit's [Bluetooth] (FUNCTION) button lights.

#### MEMO

- If you're using an iOS device (iPhone or iPad), the screen of the iOS device indicates "Bluetooth Pairing Request." Tap the [Pair] button.
- If the screen of the mobile device requests you to enter a "Pass Key," enter "0000" (four zeros).

6. In the mobile device's app (e.g., GarageBand), establish a connection with this unit.

 
## Changing the Operating Keys of the Page Turning Function

The key operations for turning pages will differ depending on the music score display app that you're using. You can choose which keys of this unit will operate the page turning function.

1. Hold down the [FUNCTION] button and press C#1, D1, or D#1 on the keyboard.


Key	Setting	Explanation
C#1	Mode1 Cursor Up/Down	The [▲] [▼] keys of the keyboard are used by the page turning app.
D1	Mode2 Page Up/Page Down	The [Page Up] [Page Down] keys of the keyboard are used by the page turning app.
D#1	Mode3 Cursor Left/Right (added)	The [◀] [▶] keys of the keyboard are used by the page turning app.

### Quick reference of Bluetooth functions

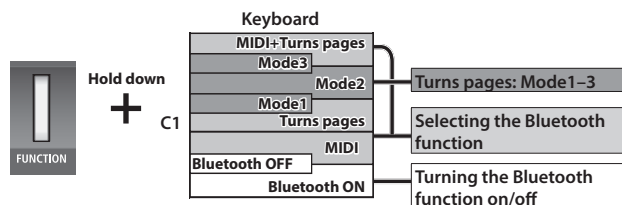

### Note when using an already-paired iOS device iOS

 The following operation is required after each time that you switch the Bluetooth page-turning/MIDI function or execute a factory reset.

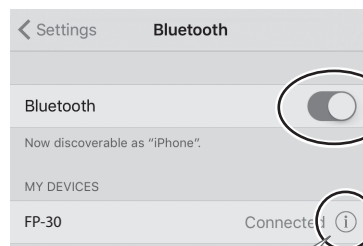

1. Disconnect "FP-30."



2. Turn off.

For details, refer to the owner's manual of your iOS device.

## Function Mode (Owner's Manual: p.7)

### Muting the Speakers When Headphones Are Connected (Speaker Auto Mute)

You can specify whether the speakers are automatically muted when headphones are connected.

Operation	Setting	Explanation
[FUNCTION] button + F7	Off	Sound is always output from the speakers.
[FUNCTION] button + F#7	On	The speakers are muted if headphones are connected (default setting).