




SYNCING MULTIPLE DFAMS

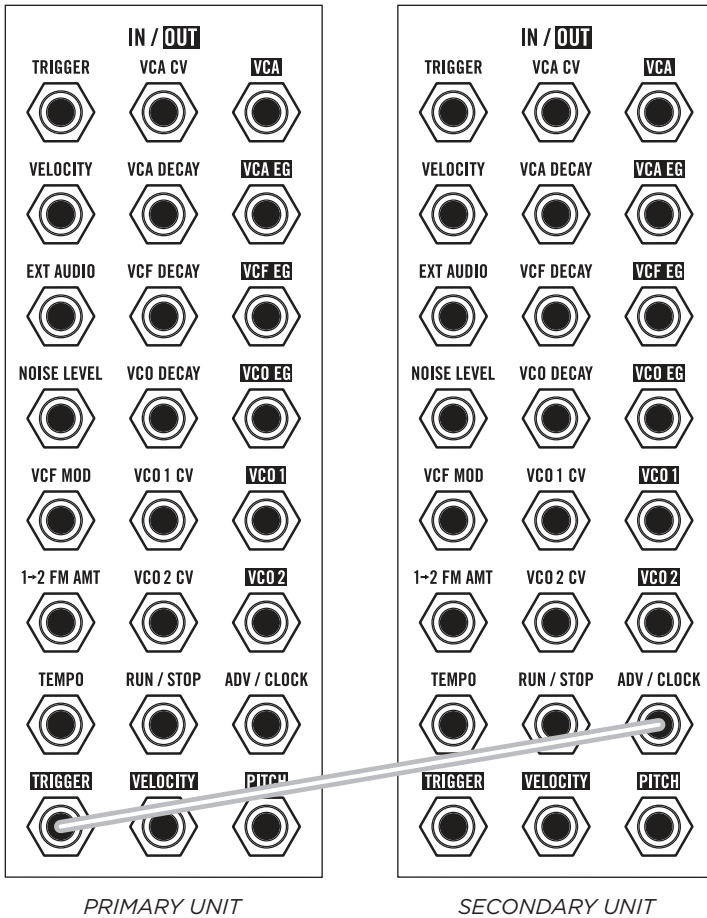

To Sync multiple DFAM units together, simply patch from the **TRIGGER** output on the Patchbay of the Primary unit, into the **ADV / CLOCK** input on the Secondary unit.

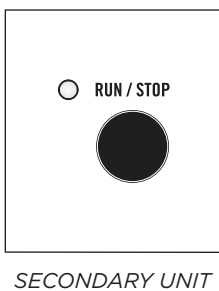

Press **RUN / STOP** on the Secondary unit first. This will ensure that it is ready to play when it begins receiving a Clock signal from the Primary unit.

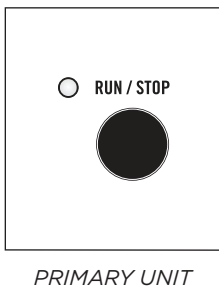

Press **RUN / STOP** on the Primary unit. Both units should now be playing in sync.